



Chapter 5 (Video Clip 5) – Towing the VW

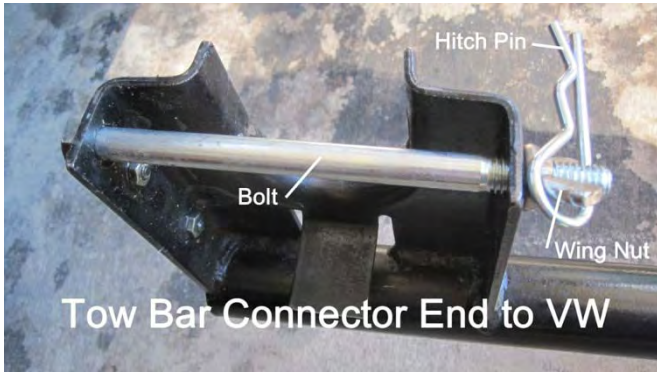

1. Place the VW on level ground.

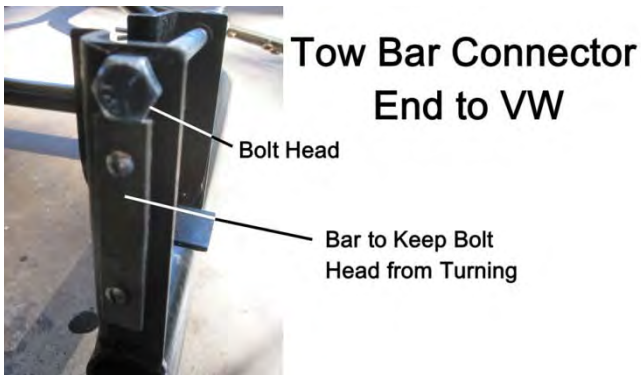


2. Inspect the connector end to the VW axle.




3. Slide the Tow Bar under the VW axle being careful not to damage the grease fittings.



4. With the block of wood shown slowly raise the tow bar to the axle.

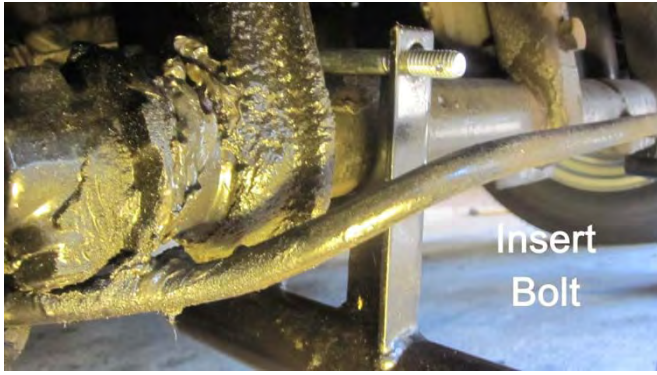

5. From the rear insert the special bolt as shown.

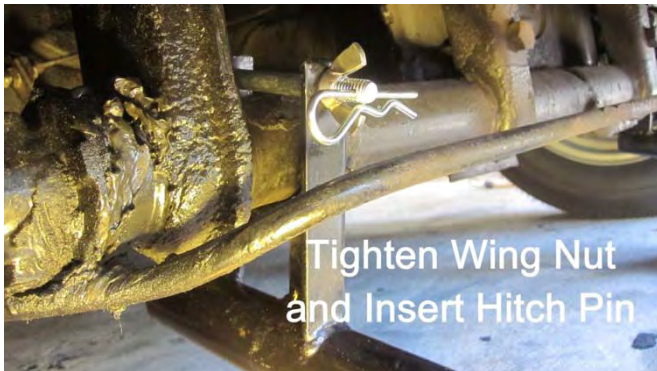


6. Add the wing nut and insert the hitch pin on both sides.




7. Attached the magnetic lights and make sure the electrical wires are secure as shown below.




8. Fasten the wires with small bungee cords to the rear bumper as shown.

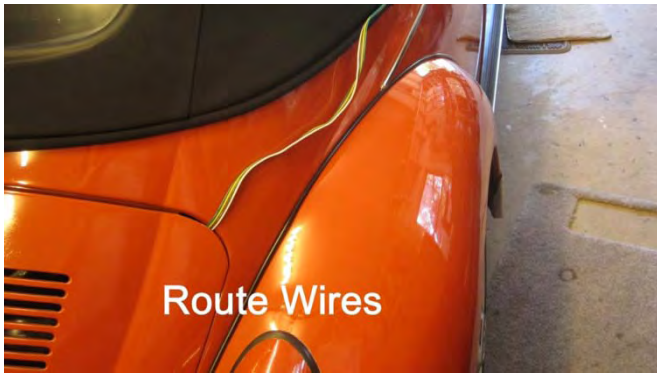


9. Route the wires through the engine bay, then inside the windows as shown.

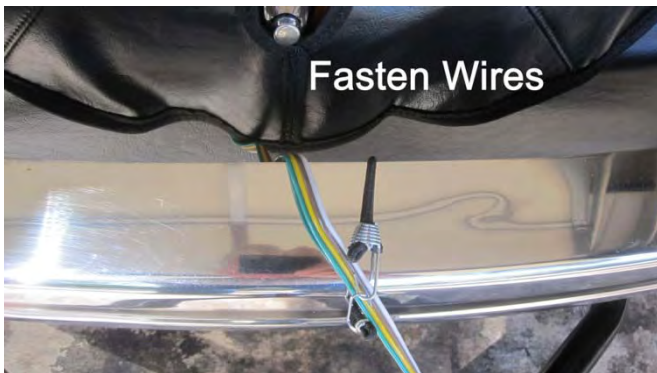

10. Fasten the wires to the front bumper.

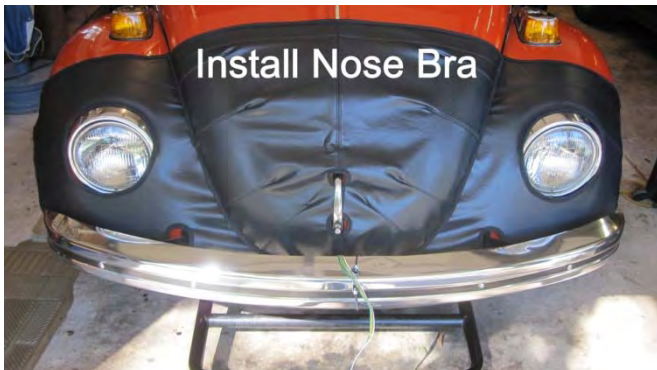

11. Install the nose bra so gravel from the tow car does not hit the VW nose.

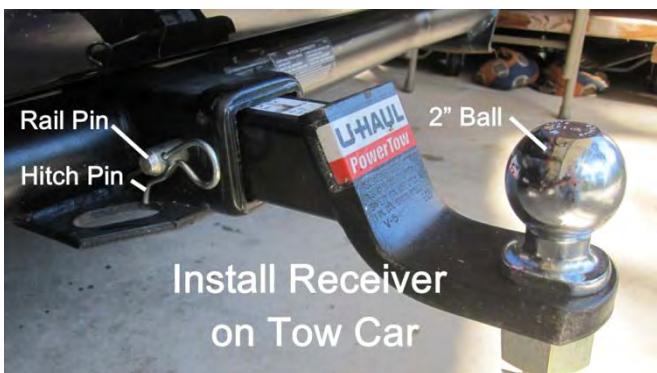

12. Install the receiver on the tow vehicle as shown.




13. Make sure the gear shift leaver is in neutral.




14. Connect the tow bar to the 2" trailer ball on the tow vehicle. Be sure to lock the latch on the receiver.



15. Connect the Electrical Connection and install Safety Chains

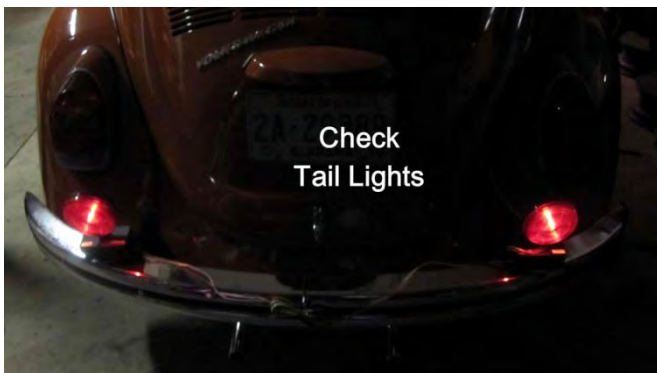


16. Check to make sure the Tail Lights work.

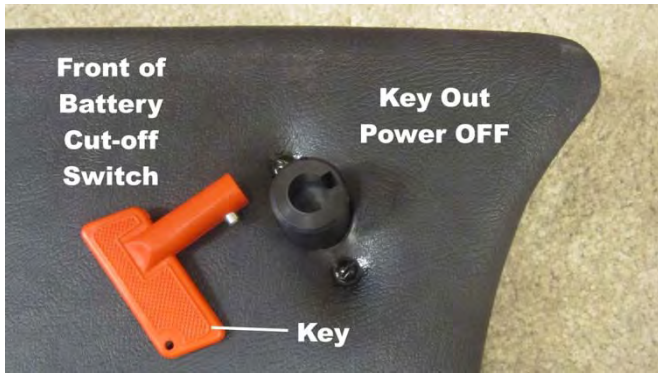

17. Disconnect the battery by turning the battery cut-off switch and remove the key.



18. Turn the key-switch on to dis-engage the steering wheel lock.

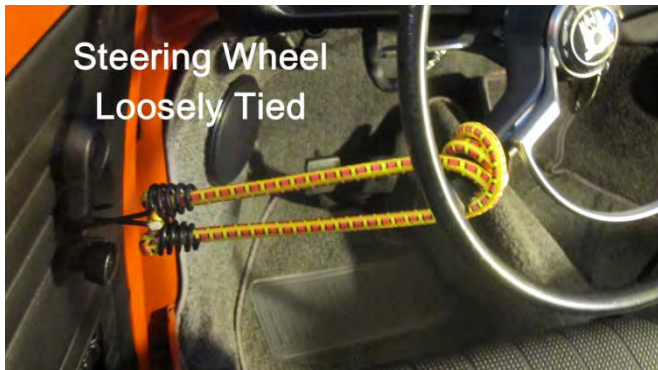

19. Tie the steering wheel loosely so that it can turn slightly. **(Most people omit this Step)**

20. Recheck all above. Then Double Check!



21. Pull off slowly and DO NOT try to back the car. Go forward for all movements.



22. Stop and check connections frequently.

*Cost \$0 Since previously purchased
Time Approximately 2 Hours*

Towing - Quick Check List		
Leaving	Returning	
<input type="checkbox"/>	<input type="checkbox"/>	1. Connect Tow bar, wing nut & Hitch Pin to VW Axel
<input type="checkbox"/>	<input type="checkbox"/>	2. Connect Tow Bar to Tow Car Receiver, Safety Lock Latch
<input type="checkbox"/>	<input type="checkbox"/>	3. Connect Safety Chains
<input type="checkbox"/>	<input type="checkbox"/>	4. Attached Magnetic Lights, & Secure Wires
<input type="checkbox"/>	<input type="checkbox"/>	5. Plug in Electrical Connection to Tow Car Electrical System
<input type="checkbox"/>	<input type="checkbox"/>	6. Check to make sure Tail Lights WORKS
<input type="checkbox"/>	<input type="checkbox"/>	7. PUT CAR GEAR SHIFT IN NEUTRAL
<input type="checkbox"/>	<input type="checkbox"/>	8. Turn Battery Cut-Off Switch Off by Remove Red Key
<input type="checkbox"/>	<input type="checkbox"/>	9. Turn Ignition Switch on to UNLOCH Steering Wheel
<input type="checkbox"/>	<input type="checkbox"/>	10. Tie Steering Wheel loosely (Most People Omit this Step)
<input type="checkbox"/>	<input type="checkbox"/>	11. Drive off Slowly, NO BACKING UP
<input type="checkbox"/>	<input type="checkbox"/>	12. Stop to Check Connection at Convenient Places